

Installation programme to Timer CO/TECH 36-460

The timer includes a battery which is charged when you put the timer in the plug socket. When the battery is charged you can remove from the plug.

Time display

Press and hold **CLOCK** until the display change the time format

At 12 hour AM and PM is shown on the display

At 24 hour neither AM nor PM is shown

Set Time

Push **CLOCK** to normal mode (24Hour)

1. Push and hold **SET** until the week days blinks
2. Push **Λ+** to change weekdays forward **Λ-** to change backwards
3. The selected day is shown on the display
4. Push **SET** to confirm
5. The hour setting blinks
6. Use **Λ+** or **Λ-** to set hours
7. Push set to confirm
8. The minute setting blinks
9. Use **Λ+** or **Λ-** to set minutes hours
10. Push **CLOCK** to return to normal mode

Installation of programme

1. Push **ON/OFF** to set the time switch in auto mode
2. Press **Λ+** to go to programming mode
1ON is shown in the left corner on the display and days of the week on top
3. Press **SET** and days of the week blinks
4. Press **Λ+** to select day combinations, (use Monday -Sunday)
if you want the same programme to be used all days
5. Press **SET** to confirm and the hour setting blinks
6. Use **Λ+** or **Λ-** to set hour
7. Push **SET** to confirm and minute settings blink
8. Use **Λ+** or **Λ-** to set minutes
9. Press **Λ+** **1OFF** is shown in the left corner
10. Press **SET** and days blink
11. Press **SET** and hour setting blinks
12. Use **Λ+** or **Λ-** to set hours
13. Push **SET** to confirm and minute settings blink
14. Use **Λ+** or **Λ-** to set minutes

Now you can repeat the same procedure for settings up to 20ON----- >20OFF

Press **CLOCK** to return to normal mode

